


Identify which is the feed wire on your machine from the wiring diagram, or check which wire is live when the ignition is switched on. This is the 'B' or live connection.

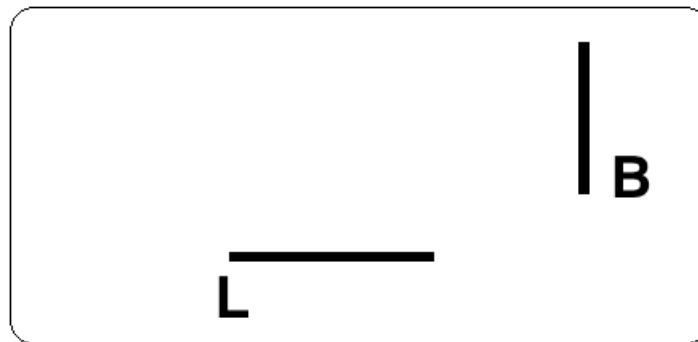

L= 'Lamps'

B='Battery' IE live



DRG:IR-Elect

©Rex's Speed Shop 2018. All Rights Reserved